




Artisan® Siding with Lock Joint System

SINGLE FAMILY INSTALLATION REQUIREMENTS

EFFECTIVE JULY 2018


IMPORTANT: FAILURE TO FOLLOW JAMES HARDIE WRITTEN INSTALLATION INSTRUCTIONS AND COMPLY WITH APPLICABLE BUILDING CODES MAY VIOLATE LOCAL LAWS, AFFECT BUILDING ENVELOPE PERFORMANCE AND MAY AFFECT WARRANTY COVERAGE. FAILURE TO COMPLY WITH ALL HEALTH AND SAFETY REGULATIONS WHEN CUTTING AND INSTALLING THIS PRODUCT MAY RESULT IN PERSONAL INJURY. BEFORE INSTALLATION, CONFIRM YOU ARE USING THE CORRECT HARDIEZONE® PRODUCT INSTRUCTIONS BY VISITING HARDIEZONE.COM OR CALL 1-866-942-7343 (866-9-HARDIE).

All profiles can be installed horizontally, vertically, and as soffit.

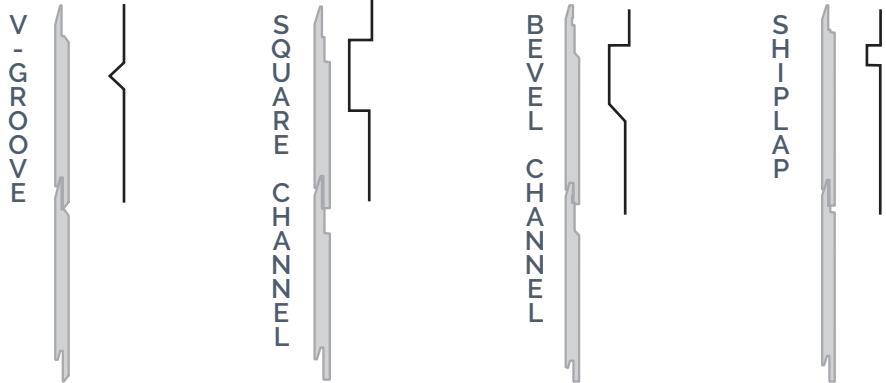

STORAGE


Store flat and keep dry and covered prior to installation. Installing siding wet or saturated may result in shrinkage at joints. Protect edges and corners from breakage. James Hardie is not responsible for damage caused by improper storage and handling of the product.

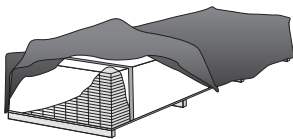


HANDLING

To prevent damage to edges, extra care should be taken when removing planks from the pallet, while handling, and when installing. Planks are interlocked together on the pallet, therefore they should be removed from the pallet horizontally (side to side) to allow planks to unlock themselves from one another.

PULL FROM ACROSS THE STACK

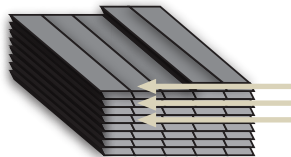

DO NOT GO DOWN THE STACK

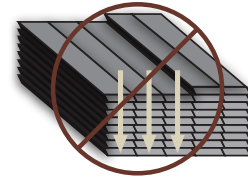

CUTTING INSTRUCTIONS

1. Position cutting station so that wind will blow dust away from user and others in working area.
2. Use one of the following methods:
 - a. **Best:** Circular saw equipped with a HardieBlade® saw blade and attached vacuum dust collection system
 - b. **Better:** Circular saw equipped with a HardieBlade saw blade and a dust collection feature (e.g. Roan® Saw)
 - c. **Good:** Circular saw equipped with a HardieBlade saw blade

For maximum dust reduction, James Hardie recommends using the “Best” cutting practices.

For best performance when cutting with a circular saw, James Hardie recommends using HardieBlade saw blades.

- **NEVER** grind or cut with a power saw indoors.
- **NEVER** dry sweep dust; use wet dust suppression or vacuum to collect dust.

NOTE: James Hardie makes no representation or warranty that use of a particular cutting option will assure your compliance with applicable laws and safety requirements. If you are unsure which cutting option is best for your jobsite, consult a qualified industrial hygienist or safety professional, or contact your James Hardie representative for assistance.



V-GROOVE | SQUARE CHANNEL | BEVEL CHANNEL | SHIPLAP



Visit aspyredesign.com for the most recent version.

ASP1720 P1/7 07/18



GENERAL REQUIREMENTS

- These instructions are to be used for single family installations only. For Commercial / Multi-Family installation requirements go to www.aspyredesign.com*
- Artisan® siding can be installed over braced wood or steel studs, 20 gauge (33 mils) minimum to 16 gauge (54 mils) maximum, spaced a maximum of 24 in o.c. or directly to minimum 7/16 in thick OSB sheathing. See General Fastening Requirements. Irregularities in framing and sheathing can mirror through the finished application. Correct irregularities before installing siding.
- Information on installing James Hardie products over non-nailable substrates (ex: gypsum, foam, etc.) can be located in JH Tech Bulletin 19 at www.aspyredesign.com
- A water-resistive barrier is required in accordance with local building code requirements. The water-resistive barrier must be appropriately installed with penetration and junction flashing in accordance with local building code requirements. James Hardie will assume no responsibility for water infiltration. HardieWrap® Weather Barrier, a non-woven non-perforated housewrap, does comply with building code requirements.
- All flashing and clearance details in figs. 1-13 MUST be followed when installing James Hardie® products.
- Adjacent finished grade must slope away from the building in accordance with local building codes - typically a minimum of 6in. in the first 10ft.
- Do not use Artisan® siding in fascia or trim applications.
- Do not install James Hardie® products such that they may remain in contact with standing water.
- DO NOT use stain, oil/alkyd based paint, or powder coating on James Hardie products.
- For larger projects, including commercial and multi-family projects, where the span of the wall is significant in length, the designer and/or architect should take into consideration the coefficient of thermal expansion and moisture movement of the product in their design. These values can be found in the Technical Bulletin #8 "Expansion Characteristics of James Hardie Siding Products at www.aspyredesign.com.
- James Hardie Building Products provides installation /wind load information for buildings with a maximum mean roof height of 85 feet. For information on installations above 60 feet, please contact JH technical support.

CLEARANCE AND FLASHING REQUIREMENTS

Figure 1
Roof to Wall

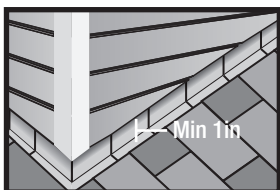


Figure 2
Horizontal Flashing



Figure 3
Kickout Flashing

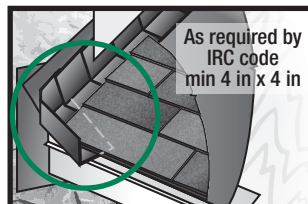


Figure 4
Slabs, Path, Steps to Siding

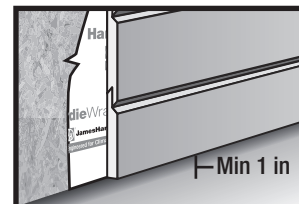


Figure 5
Deck to Wall

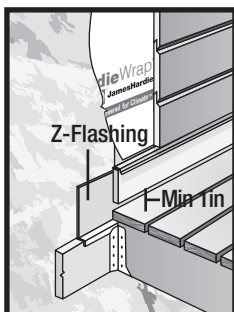


Figure 6
Ground to Siding

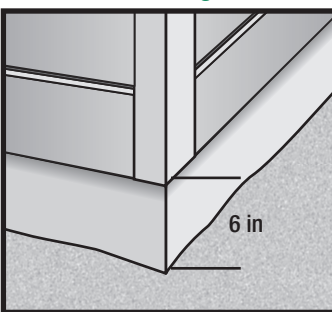


Figure 7
Gutter to Siding

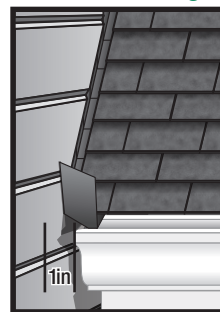


Figure 8
Sheltered Areas

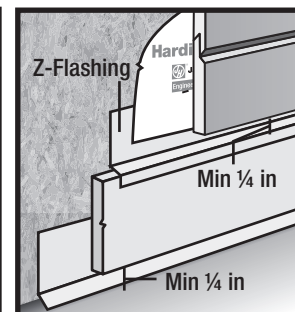


Figure 9
Mortar/Masonry

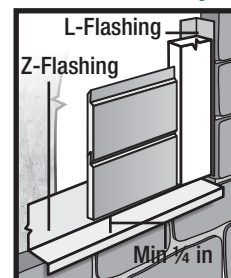


Figure 10
Drip Edge

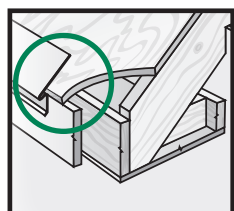


Figure 11
Block Penetration

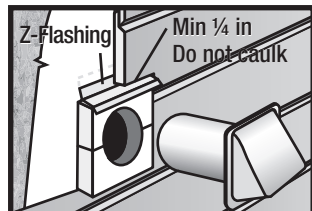


Figure 12
Valley/Shingle Extension


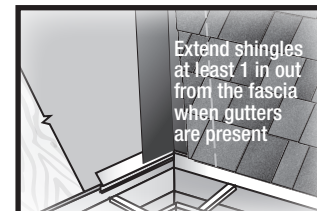


Figure 13
Bridging Floors



*James Hardie recommends installing a rainscreen (an air gap) between the Artisan siding and the water-resistive barrier as a best practice.

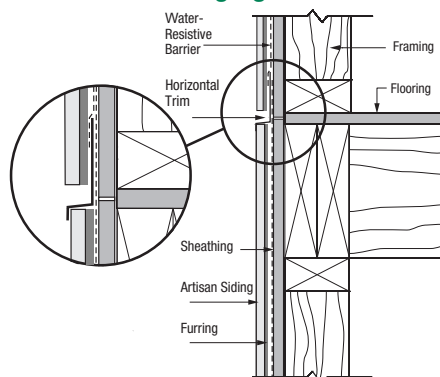


ARTISAN SIDING INSTALLED HORIZONTALLY

JOINT PLACEMENT & TREATMENT


Artisan® siding butt joints must not fall within 4 in of a stud. (fig. 14). Do not nail within 2 in of the end of planks.

FIGURE 14

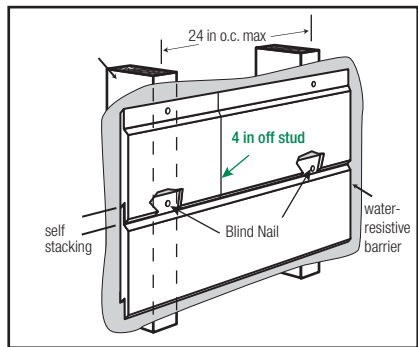


OPTION A: CAULKED BUTT JOINT

FIGURE 15A

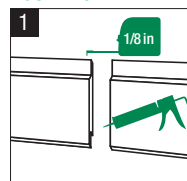

OPTION B: JOINT FLASHING

FIGURE 15B

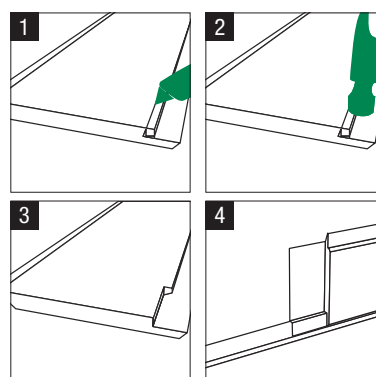

INSTALLATION/FASTENER REQUIREMENTS

- Follow all clearance requirements.
- A starter strip is not needed.
- Level and install starter course.
Tip: Use a scrap piece of siding or wood block to seat the siding into the course below.
- Artisan siding may be installed by stacking the siding onto the course below. This can be completed by one person without the need of a lap gauge.
- Measure as needed to ensure siding is level and has proper reveal.
- In areas such as gables, under windows, or other areas where stacking may be difficult use one of the following methods
 - Cut the material in sections, install first section into place. Take remaining section and slide into place, then fasten both sections.
 - Using a utility knife, remove the lock joint lip and install.

BLIND NAILING


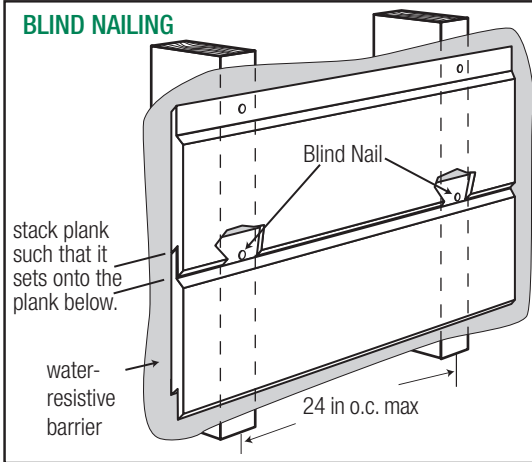


FIGURE 16A

FIGURE 16B

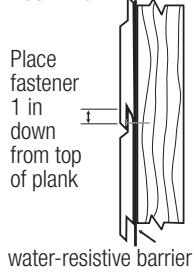

FACE NAILING

FIGURE 17B


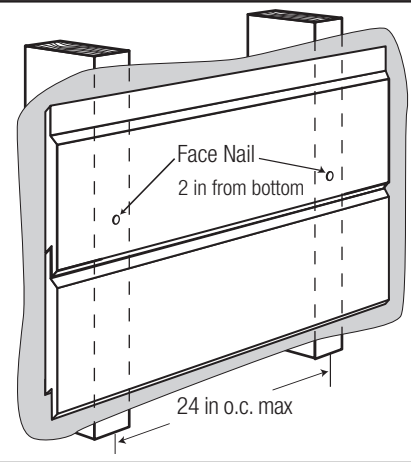


FIGURE 17A

For proper fastener selection and fastening schedules for various wind load requirements and framing options, refer to the product Technical Data Sheet at www.aspyredesign.com

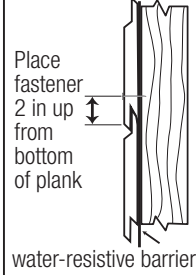


ARTISAN SIDING INSTALLED VERTICALLY

General Requirements


The vertically installed Artisan siding with Lock Joint System must not bridge over transitions between floors or stories. A horizontal joint must be created between floors, and z-flashing must be provided at each horizontal joint.

Do not create horizontal butt joints between planks. Only use full length pieces for each floor section, except where abutting wall openings and penetrations.

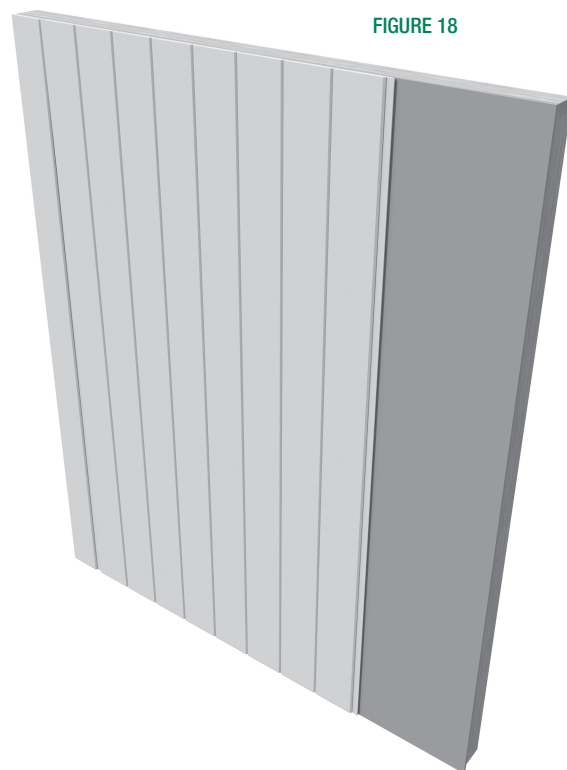

A bead of sealant must be placed along the entire length inside each groove of the lock joint about to be installed on the wall. (see Fig. 19).

FIGURE 19

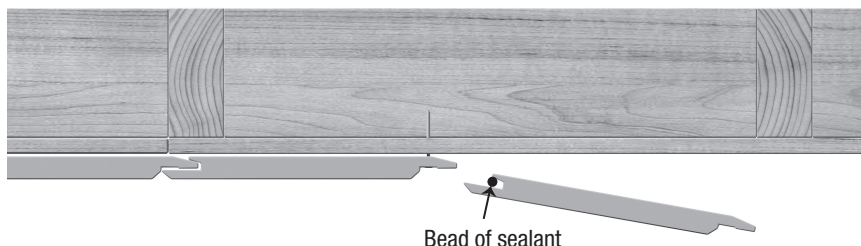

Direct Fastening to Wood Structural Panel (WSP)

- A minimum 7/16 in WSP, attached per code, is available as the outer most layer directly behind the siding.
- Siding is fastened directly to the minimum 7/16 in WSP over a standard Water Resistive Barrier (WRB) or drainable housewrap.

For proper fastener selection and fastening schedules for various wind load requirements and framing options, refer to the product Technical Data Sheet at www.aspyredesign.com



ARTISAN SIDING PRODUCTS AS SOFFIT

INSTALLATION / FASTENER REQUIREMENTS

- Artisan siding with the Lock Joint System may be installed in soffit applications over wood or steel framing spaced a maximum of 24 in on center.
- Additional framing may be needed to ensure proper fastening.
- Artisan siding can be installed in the long direction (fig. 22) or the short direction (fig. 23)
- Plan and cut out for any venting requirements prior to installation of Artisan siding.
- Place butt joints between studs (fig. 22). Install butt joints in moderate contact in soffit applications (caulking, H covers, and battens are also acceptable)

FIGURE 21

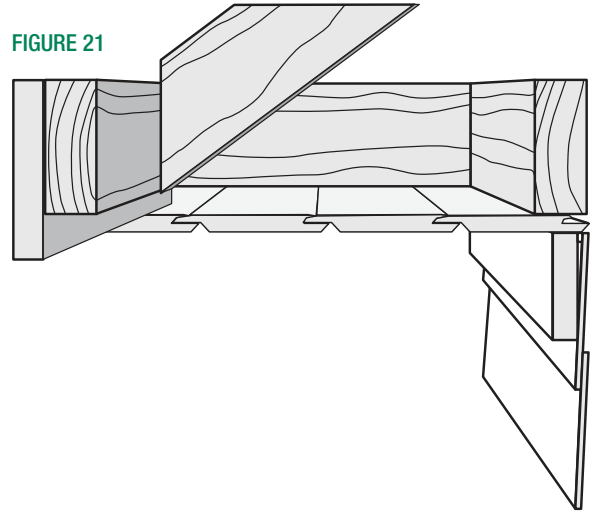


FIGURE 22


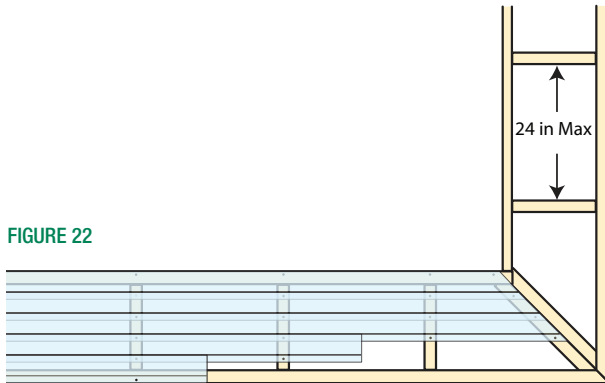


FIGURE 23

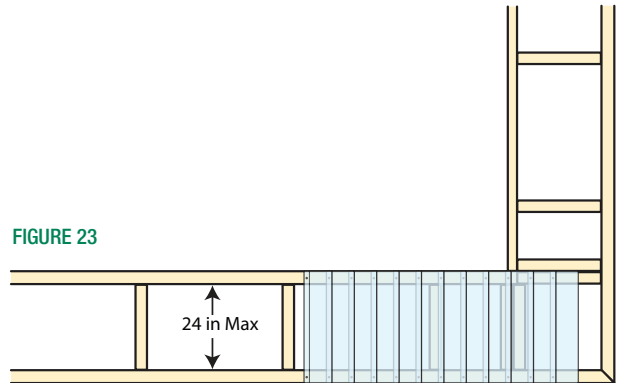

FASTENER REQUIREMENTS

- **BLIND NAILING:** Place fastener no closer than 1 in from siding ends when installing Artisan siding. Nail minimum 1 in down from top of siding when installing Artisan siding.
- **FACE NAILING:** Place fastener no closer than 1 in from siding ends and 2 in from bottom of Artisan siding.

For proper fastener selection and wind load table,
refer to the product Technical Data Sheet at www.aspyredesign.com



GENERAL FASTENING REQUIREMENTS

Fasteners must be corrosion resistant, galvanized, or stainless steel. Electro-galvanized are acceptable but may exhibit premature corrosion. James Hardie recommends the use of quality, hot-dipped galvanized nails. James Hardie is not responsible for the corrosion resistance of fasteners. Stainless steel fasteners are recommended when installing James Hardie products near the ocean, large bodies of water, or in very humid climates.

Manufacturers of ACQ and CA preservative-treated wood recommend spacer materials or other physical barriers to prevent direct contact of ACQ or CA preservative-treated wood and aluminum products. Fasteners used to attach HardieTrim Tabs to preservative-treated wood shall be of hot dipped zinc-coated galvanized steel or stainless steel and in accordance to 2009 IRC R317.3 or 2009 IBC 2304.9.5.

- Consult applicable product evaluation or listing for correct fasteners type and placement to achieve specified design wind loads.
- NOTE: Published wind loads may not be applicable to all areas where Local Building Codes have specific jurisdiction. Consult James Hardie Technical Services if you are unsure of applicable compliance documentation.
- Drive fasteners perpendicular to siding and framing.
- Fastener heads should fit snug against siding (no air space). (fig. A)
- Do not over-drive nail heads or drive nails at an angle.
- If nail is countersunk, fill nail hole and add a nail. (fig. B)
- For wood framing, under driven nails should be hit flush to the plank with a hammer (For steel framing, remove and replace nail).
- Do not use aluminum fasteners, staples, or clipped head nails.

PNEUMATIC FASTENING

James Hardie products can be hand nailed or fastened with a pneumatic tool. Pneumatic fastening is highly recommended. Set air pressure so that the fastener is driven snug with the surface of the siding. A flush mount attachment on the pneumatic tool is recommended. This will help control the depth the nail is driven. If setting the nail depth proves difficult, choose a setting that under drives the nail. (Drive under driven nails snug with a smooth faced hammer - Does not apply for installation to steel framing).



CAULKING & PAINTING

For best results use an Elastomeric Joint Sealant complying with ASTM C920 Grade NS, Class 25 or higher or a Latex Joint Sealant complying with ASTM C834. Caulking/Sealant must be applied in accordance with the caulking/sealant manufacturer's written instructions. **Note: Some caulking manufacturers do not allow tooling.**

DO NOT use stain, oil/alkyd based paint, or powder coating on James Hardie® Products. Factory-primed James Hardie Products must be painted within 180 days of installation. 100% acrylic topcoats are recommended. Do not paint when wet. For application rates refer to paint manufacturer's specifications. Back-rolling is recommended if the paint is sprayed.

CUT EDGE TREATMENT

Caulk, paint or prime all field cut edges.

CARE & MAINTENANCE

As a guide, it is recommended that normal maintenance tasks shall include but not be limited to:

- Washing down the exterior surfaces every 6 to 12 months with a garden hose or low pressure water spray to remove dirt and debris.*
- Re-applying of exterior finishes.*
- Maintaining the exterior envelope and connections including joints, penetrations, flashings, and sealants (caulking) that may provide a means of moisture entry beyond the exterior cladding.
- Cleaning out gutters, blocked pipes, and overflows as required.
- Pruning back vegetation that is touching the building. Clearance between the siding and shrubs is recommended.
- Ensuring required external ground clearances and drainage slopes are maintained.

*Refer to your paint manufacturer for washing and recoating recommendations.



WARNING

High pressure water blast and sand blasting may damage the surface of the fiber cement product. Low pressure water spray, a soft medium bristle (nonmetal) brush is most suitable for cleaning fiber cement products. Acid washing can damage the fiber cement surface and is not recommended.

Note: If using a pressure washer, care must be taken to ensure that the water stream does not damage the surface of the siding. Damage to siding arising from improper cleaning or maintenance may not be covered by the James Hardie warranty. Using wide fan tips that are kept a minimum of 6 feet from the wall and at pressures under 1500 psi will minimize the chance of damaging the siding.

COVERAGE CHART / ESTIMATING GUIDE

Number of 12 ft planks, Includes 5% waste factor.

Coverage Area Less Openings 1 SQ = (100 sq ft)	Plank Width Exposure	Plank Width Exposure
	7	9
1	15	12
2	30	24
3	45	35
4	60	46
5	75	59
6	90	70
7	105	82
8	120	94
9	135	105
10	150	117
11	165	129
12	180	140
13	195	152
14	210	164
15	225	175
16	240	187
17	255	199
18	270	210
19	285	222
20	300	234

SILICA WARNING

DANGER: May cause cancer if dust from product is inhaled. Causes damage to lungs and respiratory system through prolonged or repeated inhalation of dust from product. Refer to the current product Safety Data Sheet before use. The hazard associated with fiber cement arises from crystalline silica present in the dust generated by activities such as cutting, machining, drilling, routing, sawing, crushing, or otherwise abrading fiber cement, and when cleaning up, disposing of or moving the dust. When doing any of these activities in a manner that generates dust you must (1) comply with the OSHA standard for silica dust and/or other applicable law, (2) follow James Hardie cutting instructions to reduce or limit the release of dust; (3) warn others in the area to avoid breathing the dust; (4) when using mechanical saw or high speed cutting tools, work outdoors and use dust collection equipment; and (5) if no other dust controls are available, wear a dust mask or respirator that meets NIOSH requirements (e.g. N-95 dust mask). During clean-up, use a well maintained vacuum and filter appropriate for capturing fine (respirable) dust or use wet clean-up methods - never dry sweep.

WARNING: This product can expose you to chemicals including respirable crystalline silica, which is known to the State of California to cause cancer. For more information go to [P65Warnings.ca.gov](https://www.p65warnings.ca.gov).

RECOGNITION: Artisan® Siding with Lock Joint System complies with ASTM C1186 and meets the Fiber-Cement Siding code requirements in the 2006, 2009, 2012 & 2015 International Building Code® Section 1404.10, 1405.16, and 1405.16.2; and the 2006, 2009, 2012 & 2015 International Residential Code® for One- and Two-Family Dwellings Table R703.4 (Table R703.3 in 2015 IRC) and section R703.10.2. Supplementary code compliance details are found the Artisan® Siding with Lock Joint System Technical Data Sheet